

MANUAL

EVOLVEO

MODEL

VERSION / DATE

EasyPhone FP

I. / 20.10.2021



CZ

CONTENTS

PHONE DESCRIPTION.....	3
Phone status icons:.....	8
Putting the phone in operation.....	10
Charging the battery.....	11
Turning phone on/off.....	11
Call	11
MENU.....	12
PHONEBOOK.....	12
PHOTO CONTACTS.....	14
MESSAGES.....	14
CALL HISTORY.....	15
MULTIMEDIA.....	15
USER PROFILES.....	17
SETTING.....	17
ORGANIZER.....	20
SOS SETTINGS.....	20
SERVICES.....	22
WARRANTY AND POST-WARRANTY SERVICE.....	25

PHONE DESCRIPTION







1	Volume Settings	10	Speed Dial
2	Camera	11	Button * / Left
3	Flashlight / Flash	12	Flashlight Off Button
4	SOS Button	13	Button # / Right
5	Loudspeaker	14	Photo Contacts
6	Earphone Connector	15	Camera
7	Earphone	16	Turning ON/OFF
8	Left Function Button (LB) / Menu	17	Right Function Button (RB)
9	Call Button	18	Up / Down









FUNCTION	BUTTON
Left function button (LB) / Menu (8)	By pressing the button, you enter the Menu. Press the button again to run the displayed function.
Call button (9)	Push this button to commence a call to the selected phone number. Press to accept incoming calls. Press the button in the standby mode to view the call history.
Right function button (RB) / Menu (17)	Push this button to open the contact list. Press this button again to return to the previous menu.
ON/OFF button (16)	Turn phone off: Hold down the button to turn the phone off. Turn phone on: Press and hold the button longer to turn the phone on again. Press this button to return to







	<p>the standby mode. Press this button to hang up.</p>
<p>Up/Down button (18)</p>	<p>Press to scroll through the list of functions. In standby mode, press the "Down" button to enter SMS and press the "Up" button to call up the Shortcuts function. In "FM radio" mode, use the "Up" and "Down" buttons to set the frequency.</p>
<p>Speed dial (10)</p>	<p>Dials a preset number</p>
<p>Photo contacts (14)</p>	<p>Eight speed dials with the photo of the called person</p>
<p>Button */ Left (11)</p>	<p>Press the button during text writing to call up special characters. In selected functions, it is used for shifting left. Push the * button twice to enter the "+" symbol for international calls.</p>

0 button / Flashlight (12)	Hold down the button to turn the flashlight on/off
Button # / Right (13)	Press to change the text input method. Ringtone profile changes (long press). In selected functions, it is used for shifting right.
Side button	Volume button (1): Adjust the volume during a call, when playing videos, and listening to FM radio.

Phone status icons:

Icon	Description
	Activated alarm
	Bluetooth On

	Connected earphones
	GPRS data transmission
	Missed call
	Unread SMS message
	Full capacity of SMS messages
	Full capacity of MMS messages
	Unread MMS message
	USB cable connected

	Activated Roaming
	GMS signal strength
	Battery charge status
	Only vibrations
	Vibrations and ringtone on
	First vibrations and than ringtone

Putting the phone in operation

Insert your fingernail into the slot under the back cover of the phone and remove the cover. Insert the SIM card into the SIM card slot and eventually the memory card, if purchased, to the TF slot. Insert the battery. The metal contacts of the battery must face the contacts in the phone.

Replace the battery cover.

Charging the battery

Connect the charger to the USB connector. or put the phone in the charging cradle. The charging will start automatically. The phone can be charged both on and off The battery charge status is indicated on the phone screen.

Turning phone on/off

To switch on, hold down the red button (16) until the phone switches on. (You may be prompted to enter a PIN if PIN protection is turned on). When you switch on for the first time, you are asked to select the language of the phone. After turning the phone on and selecting the language, the phone is ready for common use, i.e. it is in the standby mode.

To switch off, press and hold the red button (16) until the phone switches off.

Call

In standby mode, enter a phone number and press the call key (9) to start a call.

Press the red button (16) to end or refuse the call.

MENU

To enter, press the left function button (8).

PHONEBOOK

Add new contact

Select Menu/Phonebook and press LB (8), or press the right function button RB (17) Names in the standby mode. Using the Up/Down button (18), select Add New Record and confirm by pressing LB (8). Select the storage location (SIM card or phone). After entering the name and the phone number, press the LB button (8) to save the contact.

Search for a saved contact / call

Select Menu/Phonebook or the right function RB button (17) in the standby mode. To search, enter the contact's name or use the Up/Down button (18) to scroll through the list. After searching the contact, press the Call button (9) for calling or LB (8) for the following options.

Display – displays selected contact details and allows you to edit the contact

Send SMS – allows you to write and send an SMS to a selected contact

Send MMS – allows you to write and send an MMS to a selected contact

Call – makes a call to a selected contact

Edit – allows you to edit the contact

Delete – removes selected contact

Copy – allows you to copy contacts from SIM to phone memory and vice versa and import and export contacts.

Select more – enables to send an SMS to more contacts or to delete several contacts at one time

Add to Blacklist – by activating this function, you prevent the contact from calling you

Add to button – setting the speed dial for M1 and M2 buttons

Settings – allows you to view the memory status, the preferred storage, to set the speed dial, Top10 contacts, or other functions

Speed Dial

Select Menu/Phonebook or the right function RB button (17) in the standby mode. Select any contact, press LB (8) and select Contact Settings/Speed Dial. Activate the function and set the numbers. It is possible to set and store 8 speed dial numbers here, which correspond to numbers 2-9.

After activating speed dialing in standby mode, press and hold one of the 8 alphanumeric keys and the phone dials the corresponding phone

number.

PHOTO CONTACTS

To eight contacts, you can add a photo of the called person and use speed dial for calling them.

Add new photo contact

In the standby mode, select the Photo Contacts button (14). Select one out of eight contacts, and select Edit by pressing LB (8). Enter the name, number and the caller picture from the file or from the camera, and save it.

Calling to a photo contact

In the standby mode, select the Photo Contacts button (14). Select one out of eight contacts, and make a call by pressing the Call button (9).

MESSAGES

The phone allows receiving and sending SMS and MMS messages. When entering the menu, the following is displayed:

Write message – create and send a new SMS

Inbox – received messages

Drafts - messages saved for later work

Outgoing messages – messages for sending

Sent messages – sent messages

Delete messages – used for message deleting

Setting the operator messages – special setting, requires operator's support

SMS templates – a default list of messages

Settings – allows you to set preferred storage, memory status, etc.

Write message

Select Menu/Messages/New. Enter message text. Using the # button (13) you can switch between lowercase/uppercase/numbers, and * button (11) can be used to enter special symbols. Press LB (8), enter the phone number manually or you can select it from the contact list, and select Send.

Read message

To read messages Select Menu/Messages/Inbox, select the appropriate message and press LB (8) for displaying.

CALL HISTORY

Select Menu/Call History. From the main menu, enter the Call History, which displays missed calls, dialed numbers and incoming calls

MULTIMEDIA

1. FM radio

Select Menu/Multimedia/FM Radio.

Using Up/Down buttons (18), turn the radio on/off.
Using Left (11) / Right (13) buttons, shift the frequencies.

Using the LF button (8), you display the following options:

Station list: displays a list of manually or automatically searched stations.

Manual insertion: You can manually enter the station frequency. To enter 89.9 press "89 # 9".

Auto search: Searches stations automatically. The stations are saved under 1-9 buttons.

Setting: background playback option. Select using # or * buttons, and confirm by LB (8).

2. Audio player

The phone allows you to play music files, such as MP3s.

3. Answerphone

Select Menu/Multimedia/Answerphone. Using the LB button (8), you can start recording, playing, change the storage location or the file format.

4. Camera

Press the Camera button (15) or Menu/Multimedia/Camera to turn on the incorporated camera. Press the Camera button (15) to take a picture. Press the LB button (8) to

enter the menu where images can be viewed or camera settings can be changed.

5. Photo browser

Select Menu/Multimedia/Photo Browser. Select the picture and press LB (8) to display, send, re-name, delete, etc. the picture.

USER PROFILES

Select Menu/User Profiles. You can select from four profiles: Main, Silent, Meeting, Outdoors. The settings can be adapted to specific events or environments.

SETTING

Select Menu/Settings to enter.

1. Phone settings

Select Menu/Settings/Phone settings. Using this function, the following parameters can be set:

Time and date - Time and date setting, timezone and format setting.

On/Off planning

Language – Set the phone language and the default language for writing texts.

Display properties – setting the background and

information shown on the display

Automatic time setting – set to On or Off

LCD/key backlight – setting the time after which the LCD and keypad go out, setting the LCD brightness

Setting wizard – setting of time, date and ringtone using the quick wizard

2.Call settings

Select Menu/Settings/Call Settings

Calling ID: Activate or deactivate this function.

Second call: Activate or deactivate this function, select the option to check the current settings of this function.

Call divert: Specify whether and in what situations the incoming calls to your mobile phone should be redirected to another specified phone number.

Call barring: Block numbers that you dial or that call you.

Advance settings: Here, you can turn on the call time notification, repeated dialing, and call answering method.

Call duration reminder.

Note: Some features require operator support.

3.GPS

This function enables to send the current position

of the phone using SMS to a smartphone. Select Menu/Settings/GPS.

GPS status: select On

GPS numbers: manually or from the list, set numbers which can get the phone position.

Getting the GPS position

From a smartphone (the number must be in the GPS number list), send an SMS with the form GPS or LOC to EasyPhone FP device. In a few minutes, you receive an SMS containing the phone location reference.

4.Flight mode

Turns off all phone transmitters. Select Menu/Settings/Flight Mode.

5.GPRS mode

Here, you can turn on/off the GPRS data. Active data enable faster phone localization using GPS at an SOS alarm.

6.Voice mail server

Voice mail setting.

7.Security

To protect personal data, you can set the security of the SIM card or the phone.

8.Reset settings

After entering the password "0000", the phone will be reset.

ORGANIZER

1. Calendar

You can view the date, add an appointment, delete an appointment, etc. in the calendar.

2. Calculator

This feature offers the usual calculator functions, including plus, minus, multiplication, and division.

3. Alarm

5 alarms can be set in the alarm clock with repeat, snooze or alert type.

4. Task list

Setting tasks and their reminder.

5. File manager

File manager manages files on your phone and external memory card.

SOS SETTINGS

This function allows you to automatically send a warning SMS and call the set numbers after pressing the SOS button (4). Select Menu/Settings/SOS Settings.

SOS function: activate by turning on

Fall detection: After turning on this function, if the phone or the user fall down, the SOS function gets activated. The function can be manually deactivated within 20 seconds using the On/Off button (16).

SOS alarm tone: Tone activation during an SOS alarm

Delayed calling: Time after which the phone starts dialing SOS numbers and sending SMS messages. During this time, the alarm can be deactivated.

SOS number: 5 numbers which will be dialed in the event of an alarm and to which SMS will be sent

SOS SMS: Turning the SMS sending function on.

SOS SMS text: Setting the SMS text

SOS button: Alarm activation method using the SOS button (4)

If the SOS function is switched on, holding down the "SOS" button for a longer time activates the SOS function, which will proceed as follows: A loud alarm will sound, at the same time an SMS will be sent to all emergency numbers with the preset content: Then the set emergency numbers will start dialing, each number will be dialed three times. SOS call will be terminated if some of the

addressees replies to the call or if none of the addressees replies after the third dial-up.

Important notice: The phone is equipped with the function of sending the position of the phone via an SOS message after the SOS alarm is triggered. The location is determined based on the availability of a GPS signal or a Wi-Fi network. If no of these networks is available, the location is determined using BTS.

To verify the GPS availability, enter ***#99*#** to the phone, and to verify the Wi-Fi availability, enter ***#88*#**. To localize the position, at least three fixed satellites or two Wi-Fi networks are necessary.

No guarantee for the service of sending the location is not provided and the accuracy of the results and the availability of the service is not guaranteed in any way by the phone supplier, the operator or the provider of map materials. The service may be terminated at any time without notice.

SERVICES

1. Bluetooth

You can turn on the feature and then search for another Bluetooth device, pair your phone with another device and use it together. You can also set up external storage, access to audio files, etc. via Bluetooth. Select Menu/Services/Bluetooth.

2. Services

Services provided by the mobile operator

Power adapter specifications	
Name, address and business registration number of the device manufacturer	Naxya Limited, No. 5, 17/F, Strand 50, 50 Bonham Strand, Sheung,Wan, Hong Kong,1891486
Device model No.	EP-770-FPB,FPR
Name or trademark, business registration number and address of the AC adapter manufacturer	SHENZHEN BMT ELECTRONICS CO., LTD 2/F, 1 Building, QiYu Industrial Zone, GongLe, TieZi

	Road, XiXiang Town, BaoAn District, ShenZhen City, China
Model identification mark, AC adapter	TC06
Supply voltage	100 - 240 V~
Input AC frequency	50/60 Hz
Output voltage	5V
Output current	0.55 A
Output power	2.75 W
Average activity in active mode	70.69%
Efficiency at low load	60%
Energy consumption without load	0.0077 W

WARRANTY AND POST-WARRANTY SERVICE

The warranty DOES NOT APPLY to:

- Installation of other firmware than the originally installed in the EVOLVEO phone.
- Electromechanical or mechanical damage to the phone caused by improper use (e.g. cracked display, cracked front or back cover of the phone, damaged micro-USB power connector, SIM card slot, micro-SDHC card slot, headphone jack, etc.)
- Damage to the speaker and/or headphones by metallic particles.
- Damage by natural forces such as fire, water, static electricity, high temperature.
- Faults caused by normal wear and tear.
- Damage caused by repairs performed by an unqualified person
- Phone firmware, if an update is required due to changes of the mobile network parameters.
- Mobile network failures
- Battery, in case it does not hold its capacity after 6 or more months (the warranty on the battery is 6 months).
- Intentional damage.

Warranty and post-warranty service

Repairs and service may be performed only at an authorized service point for EVOLVEO products (more at www.evolveo.com); otherwise the phone may be damaged and the warranty voided.



Disposal: The crossed-out container symbol on the product, the enclosed documentation or on packaging means that all the electric and electronic equipment, batteries and battery packs in the European Union must be disposed of as sorted waste at the end of their service life. These products must not be disposed as unsorted municipal waste.



DECLARATION OF COMPLIANCE

Abacus Electric, s.r.o. hereby declares that the EVOLVEO EasyPhone FP complies with the requirements of standards and regulations relevant for this type of device.

For the full wording of the Declaration of Conformity see <http://ftp.evolveo.com/ce/>

Dovozce / Dovožca / Importer / Importőr

Abacus Electric, s.r.o.

Planá 2, 370 01, The Czech Republic

Výrobce / Výrobca / Manufacturer / Gyártó

Naxya Limited

No. 5, 17/F, Strand 50, 50 Bonham Strand,
Sheung Wan, Hong Kong

Battery produced by:

Shenzhen Jiayuantongda Technology Co.,Ltd.
3rd Floor, A Building, Dahong Technology Park,
Baihua Community 1st Industrial Zone, No. B-10,
Guangming New District, Guangming Street,
Shenzhen, Guangdong.

Made in China

Copyright © Abacus Electric, s.r.o.

www.evolveo.com

www.facebook.com/EvolveoCZ

All rights reserved.

Product appearance and technical specifications
are subject to changes without prior notice.